

# hotspot<sup>®</sup>

by



## **Outdoor Olympia Torch Item # 60445**

Instructions for use, maintenance and assembly



Distributed by:

Well Traveled Living

P.O. Box 4, Amelia Island, FL 32035

Fax: 904-261-6769

Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)

Website: [www.wtliving.com](http://www.wtliving.com)

Ph: 800-766-9633/904-261-5400

Fax: 904-261-6769

Customer Service Hotline, 9:00 AM – 6:00 PM, EST, Monday-Friday: 866-985-7877

# Assembly

**Important: Read these instructions for use carefully so as to familiarize yourself with the appliance before connecting it to its gas canister. Keep these instructions for future reference.**

This appliance shall only be used with 14.1 ounce disposable propane canisters.

For outdoor use only – Stick in ground.

## 1 SAFETY INFORMATION

- 1.1 Check that the seal (1) (Fig 2.) is in place and in good condition before connecting the gas canister to the appliance. Do not use the appliance if it has a damaged or worn seal. Replace it.
- 1.2 Gas canisters must be fitted or changed in a well-ventilated outside location away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
- 1.3 Do not use the appliance if it is leaking, damaged or does not operate properly (malfunctioning).
- 1.4 The appliance shall only be used in a well ventilated location (minimum ventilation requirement 23 ½ feet high).
- 1.5 Always keep the appliance upright during use.
- 1.6 Always operate the appliance safely away from flammable materials. - Minimum distance from walls: 10 feet. From ceilings: 23 ½ ft.
- 1.7 During use, parts of the appliance will become hot. Do not touch torch when hot.
- 1.8 Handle the appliance with care. Do not drop it.
- 1.9 Never leave the appliance unattended when lit.
- 1.10 Keep young children away from the appliance at all times.
- 1.11 Before first use of appliance, check for propane leak as follows: 1. Make 1-2 oz. of leak solution by mixing one part dish washing liquid with 3 parts water; 2. Spoon several drops of solution (or use a squirt bottle) onto the connection between the appliance and the propane canister; 3. Watch for bubbles. If no bubbles appear, the connection is safe. If bubbles appear, there is a leak. Loosen and re-tighten the connection. Re-check for leak. If you continue to see bubbles after several attempts, disconnect the propane source and contact Customer Service. If at any time you smell gas, shut off gas to the appliance and extinguish any open flame. Allow unit to cool completely and then follow steps to check for leak.
- 1.12 Do not modify the appliance. Do not use it for anything for which it has not been designed.

## 2 INFORMATION FOR STORAGE

When not in use, wait until the appliance has cooled down, unscrew the gas canister from the appliance and store it in a cool dry place away from heat. Store where inaccessible to children – lock away appliance and canisters.

## 3 INFORMATION FOR PREPARATION AND USE

- 3.1 Before fitting a gas canister to the appliance, ensure that the appliance seal (1) is in place and in good condition. Carry out this check each time you fit a gas canister.
- 3.2 Ensure that the appliance control knob (2) is turned off (turned fully clockwise).
- 3.3 Keep the gas canister upright when fitting it to the appliance. Carefully screw the gas canister into the appliance, taking care not to screw the gas canister cross-threaded. Screw the gas canister hand tight only. Do not over tighten or you may damage the gas canister valve.
- 3.4 Check that the appliance is connected to the gas canister in a tight fashion, (check for the smell of gas around the connection joint). If you suspect that the connection joint is not tight enough, immerse the assembled appliance in a bowl of soapy water. Any leakage will be seen as bubbles coming from the leakage point. If you cannot remedy any leakage, unscrew the gas canister from the appliance and return the appliance to your place of purchase.
- 3.5 If you suspect a leakage from your appliance during use, immediately turn off the appliance control knob (turned fully clockwise).

## 4 INFORMATION FOR OPERATION OF THE APPLIANCE

- 4.1 Insert torch platform (7), make sure control knob lines up with access hole A. Release and the sleeve will clamp the torch in place.
- 4.2 Screw the pole (9) in to base of the light sleeve (8)
- 4.3 Screw the ground spike (11) into the pole (10). Erect assembled torch by pushing the spike into the ground, then follow the instructions for use.
- 4.4 To light the torch, hold a stick lighter to the top, turn the control knob (2) slowly counter-clockwise (in the direction of the “+” arrow), and light the gas.
- 4.5 After lighting, do not move the appliance around.
- 4.6 Adjust the brightness of the flame by turning the control knob (2). To increase the brightness, turn the control knob in the direction of the “+” arrow (counter-clockwise). To decrease the brightness or to turn the appliance off, turn the control knob in the direction of the “-” arrow (clockwise) (Fig.1).
- 4.7 After use, always ensure the control knob is turned fully off.

## 5 CHANGING THE GAS CANISTER

- (Always read gas canister markings)

- 5.1 Always change the gas canister outside and away from other people.
- 5.2 Check that the burner flame is extinguished before disconnecting the gas canister.
- 5.3 To disconnect the gas canister from the appliance, unscrew the gas canister counter-clockwise.
- 5.4 Check the seal (1) before connecting a gas canister to the appliance. It should be in place in its location groove and be in good condition. Do not connect a gas canister to the appliance if the seal is damaged or worn. If in doubt, replace it.
- 5.5 When fitting a gas canister to the appliance, follow the instructions 3.2 to 3.5 inclusive.

## 6 ROUTINE MAINTENANCE


- 6.1 To remove the seal (1) from its location groove, use a pointed instrument to lift it out of the groove. Take care not to damage the surfaces of the location groove.
- 6.2 To fit a replacement seal, squeeze the seal to an oval shape; push one end into the location groove; then gently push in the rest of the seal until it is fully fitted into the location groove.
- 6.3 If the torch power drops or the gas will not light, check that the gas cartridge still contains gas (shake to hear the noise made by the liquid). If so, the injector (5) might have become blocked or partially blocked.
- 6.4 To remove the injector for cleaning, unscrew the complete torch top assembly from the control tap unit in a counter-clockwise direction. The Injector (5) is now exposed for removal and cleaning (Fig 3).
- 6.5 Unscrew the injector (5) using a 6 mm A/F wrench. Remove the injector filter (6) from the injector by twisting it with the aid of a small pair of pliers (Fig 3).
- 6.6 Clean the injector by blowing through the tiny hole from the front of the injector. Do not use any type of pin to clear the blockage, as you could damage the orifice and make the appliance unsafe.
- 6.7 After cleaning, refit the filter to the injector and screw the injector tightly into the control tap unit to ensure a safe gas tight seal. To check the tightness of the injector joint, turn on the control tap and apply soapy water to the joint. If bubbles appear around the injector joint, the joint is not tight enough.
- 6.8 Screw on the complete lantern top assembly hand tight only in a clockwise direction.

## 7 SPARE PARTS AND ACCESSORIES

- 7.1 Replacement parts are available from Well Traveled Living, email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net) or call 866-985-7877.
- 7.2 If the appliance becomes damaged and a replacement is needed, contact Well Traveled Living, email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net) or call 866-985-7877.

## 8 FAULTS AND REMEDIES/RETURNING THE APPLIANCE

- 8.1 If you cannot rectify any fault by following these instructions, please contact Well Traveled Living, email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net) or call 866-985-7877, and we will provide you with instructions for return or replacement of the item.

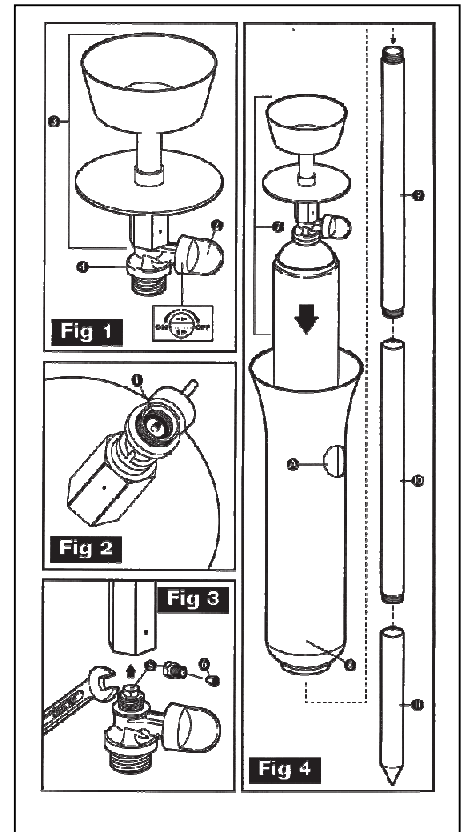

**Distributed By:**

Well Traveled Living  
716 S 8<sup>th</sup> Street  
Amelia Island, FL 32034  
Toll Free: 866-WTL-SUPP



Web: [www.wtliving.com](http://www.wtliving.com)  
Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)

**1 YEAR LIMITED WARRANTY – Customers in the Continental US**

All components are warranted for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to Well Traveled Living must be sent via prepaid freight and in the original retail packaging.

For warranty service contact Well Traveled Living at the address, phone numbers or internet site and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by the Well Traveled Living's, Amelia Island, Florida service center.

This warranty is extended only to the original purchaser. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

**\*\*\*THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE\*\*\***

**\*\*\*PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT\*\*\***

**\*\*\*FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY\*\*\***

**IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.**

**SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.**

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

**\*\*\*IMPORTANT NOTICE\*\*\***

-Do **NOT** return to place of purchase-  
For customer service and warranty issues  
contact our Customer Service Center at:  
(866)-985-7877 OR

Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)

Customer Service Hours: Mon. – Fri. 9:00 a.m. – 6:00 p.m. (EST)